


Part #03-169M / 03-173M

67/69 CAMARO / FIREBIRD DUST SEAL KIT

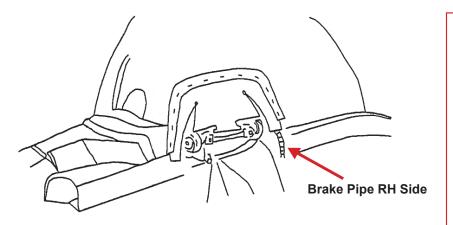

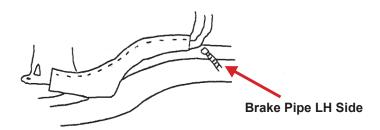

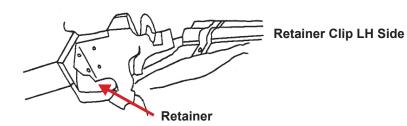



Originally, the dust shields were stapled onto the inner fenderwell. This production feature and technique is not easily done by the average restorer.


Use a pair of dykes or wire cutters to twist up ends of the staples so they can be removed, being sure to mark the position of the old flap before removal. Align the new flap in the desired position, (the edges of the new dust shields should coincide with the stamped ridge of the fenderwell). Install the new flap with the provided hardware.

CONTENTS:

2 pieces frame to fenderwell dust shields, L or R

2 pieces fenderwell to frame dust shields, L or R.

1 piece dust shield - fits between the firewall and inner fenderwell, underneath the master cylinder on the driver's side. Mounts to the stamped steel plate that is attached to the inner fenderwell.

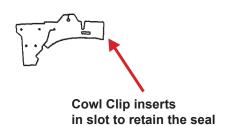



WWW.RUBBERTHERIGHTWAY.COM