



**NOTE:** It is necessary to use a weather stripping adhesive in order to install door seals. Dennis Carpenter Ford Reproductions recommends and sells 3M brand Weather Stripping Adhesive. Our part # is COAZ-19554-A

**BEFORE APPLICATION:**

Experience has shown us that taping the door seal into position before any adhesive is applied allows you to check the fit of the seal against the door. The molded rubber portions of the seals have LEFT or RIGHT indications for reference.

Apply the adhesive to the door, not the seal. Glue around the door as described in the instructions.

The best (and cleanest) results comes from glueing a 12" to 18" section of the door at a time, applying the weather stripping then taping it into position before continuing onto the next 12" to 18" section.

After the adhesive has had ample time to cure the tape can be removed.

**INSTALL DOOR SEALS**

**STEP 1**

Remove the old door seals and glue material from the doors. Clean doors thoroughly where the seals are to be adhered. A degreaser/ wax remover solution is recommended.

**STEP 2**

Determine the left and right door seals and the top rear corners of both seals. LEFT and RIGHT are indicated on the seals.

**STEP 3**

Begin the left door seal installation by attaching with 2 screws the upper rear door seal #B8S-4020566 LEFT REAR to the upper left corner of the door. (the end of the seal that looks like a golf club)

**STEP 4**

With the other end of the seal start at the top front of the vent window frame and continue down the front (hinge side) of the door. Apply adhesive to this section and secure the door seal with tape.

**STEP 5**

Continue installing the seal, applying adhesive and taping along the bottom then up the rear of the door, ending at the molded rubber section.


**STEP 6**

Follow the same instructions to install the RIGHT door seal.


Once the door seal adhesive has had sufficient time to cure the tape can be removed.

First install molded rubber section at upper rear corner

Secondly, attach opposite end of seal to vent window frame

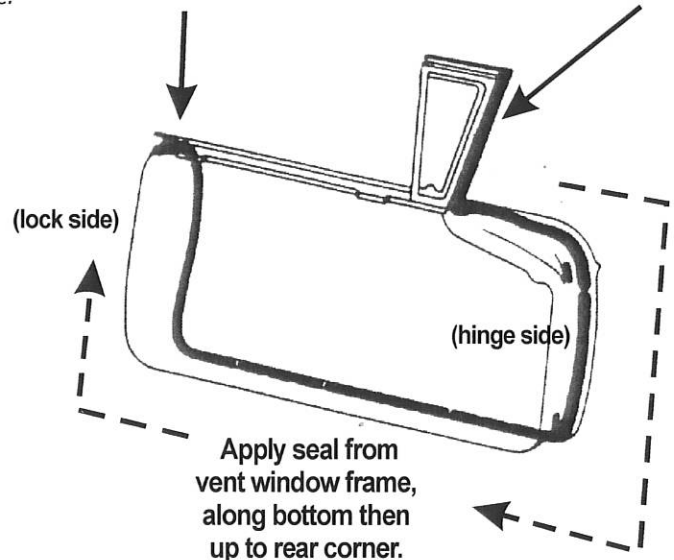

DOOR CROSS SECTION

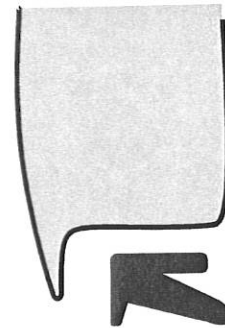

DOOR SEAL CROSS SECTION

SEAL attaches to the door in this manner

